 


WPTS003 Installation Instructions UPLIFTING SOLUTIONS



CINEFIX FLAT PANEL TILT MOUNT WALL BRACKET

FOR SCREEN SIZES 32" TO 65"

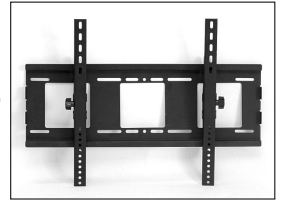

TOOLS REQUIRED: • TAPE MEASURE • STUD FINDER • SCREWDRIVER • SPIRIT LEVEL • ELECTRIC DRILL

The CINEFIX wall mount consists of 3 main assemblies:

- Wall Base Plate
- Left Adjustable Monitor Hook Bracket
- Right Adjustable Monitor Hook Bracket

It is recommended that two people install the monitor on the wall. Similar to hanging a picture firstly measure off in pencil the desired position of the monitor.

Mount the Wall Base Plate. The Base Plate **MUST** be mounted directly to a masonry wall or timber wall stud.


Fasteners and wall plugs are provided but particular fasteners may be required depending on the wall surface.

IMPORTANT

Inspect the screw holes located at the back of your monitor screen and determine which of the four screw and washer options (A-H) are the best fit for your screen.

For further information or assistance – telephone 1300 798 050 (Australia only).


1. Attach Adjustable Monitor Hook Brackets

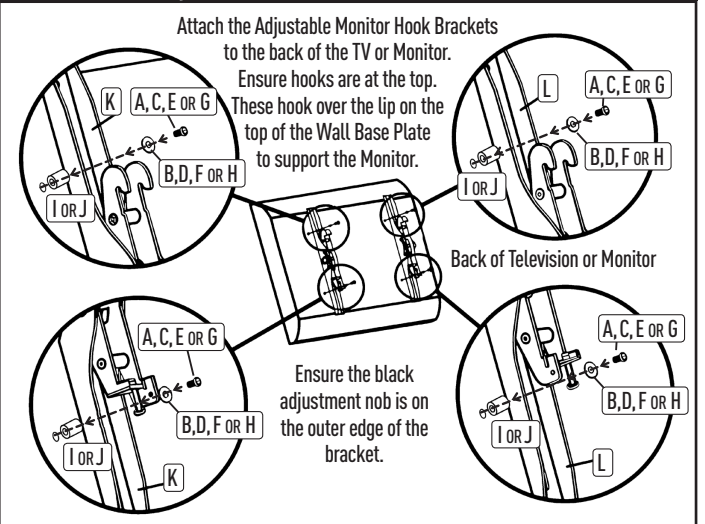


2. Mount the Wall Base Plate – preparation

You will need to determine what kind of wall you are affixing to.

Timber Stud Walls

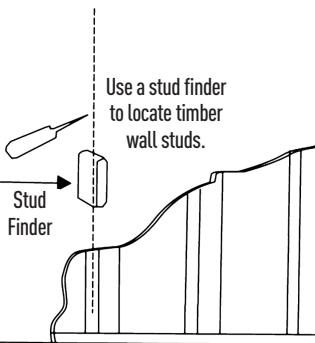


Masonry Walls – you will need to drill into the masonry and insert wall plugs.

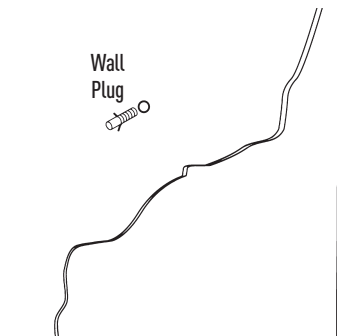

3. Mount the Wall Base Plate – installation


Lift monitor with Adjustable Monitor Hook Brackets attached and hold in position at the desired height. With a pencil mark on the wall the position of the top edge of the Adjustable Monitor Hook Brackets. Set the TV or Monitor down and using the pencil marks you have drawn on the wall position the Wall Base Plate so that the Monitor Arms will sit in the desired position.

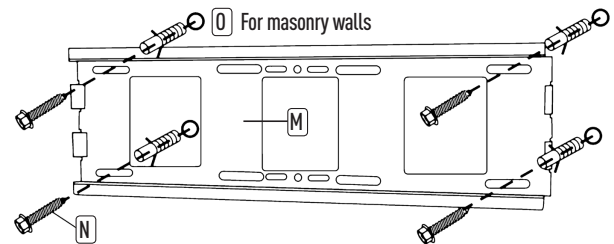

Timber Stud Walls – Position the Wall Base Plate and fix it to the wall using the 4 Coach Bolts.
Masonry Walls – Position the Wall Base Plate and fix it to the wall by screwing the 4 Coach Bolts into the 4 Wall plugs you have inserted into the holes drilled into the wall.


4. Position Monitor

Once Wall Base Plate is securely fixed to the wall lift TV or monitor up and hook K and L into M

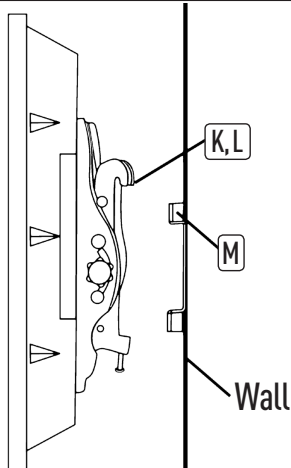

5. Secure Monitor

When monitor is in place tighten the screw at the base of each of the Adjustable Monitor Hook Brackets to firmly hold the monitor to the Wall Base Plate.

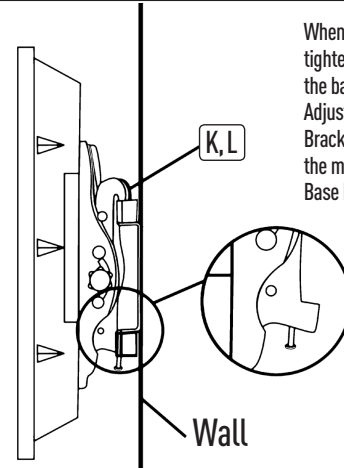


WPTS003 Installation Instructions UPLIFTING SOLUTIONS





 



 


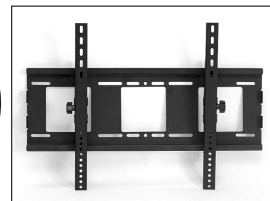


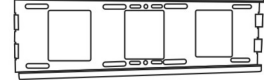
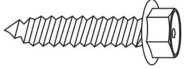
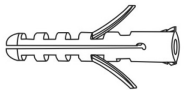
CINEFIX FLAT PANEL TILT MOUNT WALL BRACKET

**FOR
SCREEN
SIZES
32" TO 65"**

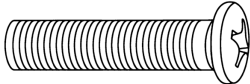

Before you begin: Check that you have all the hardware and tools required to complete the job.

Important: Inspect the holes on the back of your TV Monitor and determine which one of the 4 options of screws and washer combinations you should use.

ITEM	DESCRIPTION	QUANTITY
A	 Large Screws	4
B	 Large Washer	4
OR		
C	 Medium Screws	4
D	 Medium Washer	4
OR		
E	 Small Screws	4
F	 Small Washer	4
OR		
G	 Smallest Screws	4
H	 Smallest Washer	4
I	 Small Spacer You may or may not require this item dependant on the design of the back of the screen you are mounting.	4
J	 Large Spacer You may or may not require this item dependant on the design of the back of the screen you are mounting.	4
K	 Left Adjustable Monitor Hook Bracket Hook is at the top edge of the Bracket	1
L	 Right Adjustable Monitor Hook Bracket Hook is at the top edge of the Bracket	1
M	 Wall Base Plate	1
N	 Coach Bolt	4
O	 Wall Plugs Use these for masonry walls	4