

# Ergo Spark Office Chair




## ASSEMBLY INSTRUCTIONS

### Parts

KEY QTY DESCRIPTION	KEY QTY DESCRIPTION	KEY QTY DESCRIPTION
1 5 Caster	7 1 Backrest	13 1 M5 Size Allen Wrench
2 1 Base	8 1 Backrest Post	14 1 Air Pump
3 1 Seat Post	9 1 Backrest Post Screw	15 1 Air Pump Holder (optional)
4 1 Seat Post Cover (Optional)	10 6 Mechanism Screw	16 1 17mm Wrench
5 1 Mechanism	11 1 Backr Tight Bolt	
6 1 Seat	12 1 Back Bellow	

## Assembly Instructions

**STEP 1.**

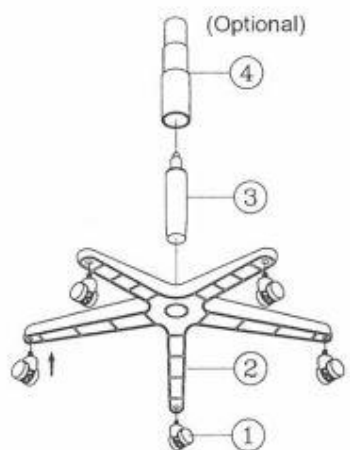

(Optional)

4


3

2

1

**STEP 2.**

**ATTENTION !!**  
Place backrest face down to attach backrest post.

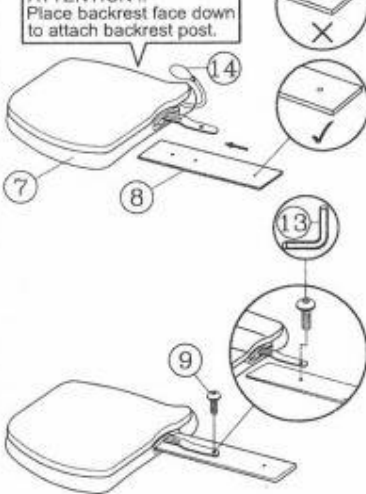


7

8

9

13

**STEP 3.**

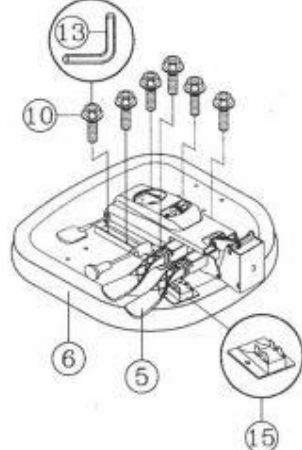

13


10

6

5

15


**STEP 4.**

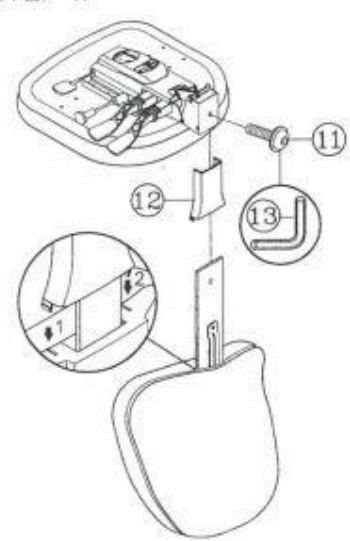


11

12

13



For lumbar support, inflate back airbag by pumping air through the air pump. To discharge air, turn releasing knob of the air pump counterclockwise.

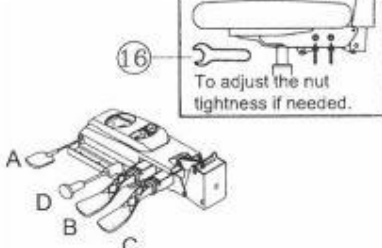

16

To adjust the nut tightness if needed.

A

D

B

C

**MECHANISM INSTRUCTIONS:**

**A** Pneumatic seat height adjustment

**B** **Seat angle adjustment :**  
Seat angle adjusts independently with a single lever.

**C** **Backrest angle adjustment :**  
Back angle adjusts independently with a single lever.

**D** Pull handle bar up , allows seat to slide forward and backward . Release handle bar to lock desired seat position.

**ATTENTION**

1. THIS ASSEMBLY INSTRUCTION IS ONLY FOR ASSEMBLING THE CHAIR. THE CHAIR DRAWING MAY BE DIFFERENT FROM CHAIR APPEARANCE.
2. SOME SCREWS MAY PREASSEMBLED , ASSEMBLERS CAN IGNORE THE STEP.
3. REMOVE ALL ITEMS FROM THE CARTON. VERIFY ALL PIECES BEFORE ASSEMBLY.

**PREVENTIVE MAINTENANCE AND WARNING!**

- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.