


Wobble Stool


STEP 1:

Remove & discard the large black plastic cap covering the tip of the gas spring.




STEP 2:

Insert the gas spring (C) into the base (D). Once aligned correctly, press down firmly

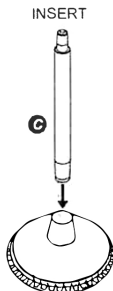


STEP 3:

Connect the Plastic Collar (B) to the Seat (A) by resting the Seat on the cushion and firmly pressing the Plastic Tube against the seat.

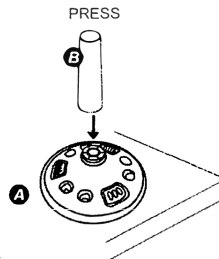

STEP 4:

Gently slide the seat onto the gas spring. Once aligned properly, press down firmly on the seat.

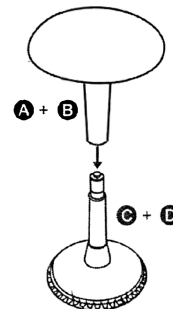


WARNING! The black plastic cap must be removed before use. Failure to remove it will make the stool malfunction.

■ OPERATING INSTRUCTIONS:

1. To raise the seat, gently press any 1 of the 3 underseat buttons.
2. To lower the seat: Gently press any 1 of the 3 underseat buttons and simultaneously press down on the seat (or sit on the seat).


TIP! If the seat does not raise easily:

1. Be sure the black plastic cap on top of the gas spring has been removed.
2. If Wobble Stool is assembled correctly, add additional pressure to the seat by pushing down or sitting on it to secure the connection for proper use.

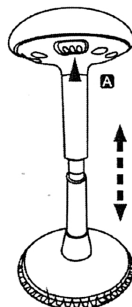


■ SITTING INSTRUCTIONS:

1. Stool's base is unstable. Stool rocks, tilts, tips and the seat swivels 360°. It is not a stationary chair. Extreme care must be used when sitting on the Stool.

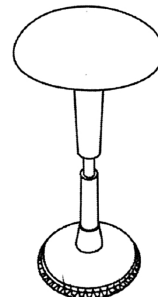

2. Only sit on Stool if both of your feet are planted firmly on the ground supporting your entire bodyweight.

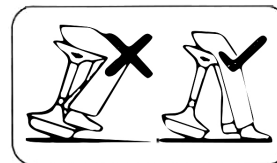

WARNING! DO NOT LEAN BACK. To reduce fall risk, do not tip Stool past vertical.
WARNING! Not for use by children.
WARNING! Do not use with only 1 foot or no feet on the ground.

Need help!

Call us on **1300 527 665**